


STUDIO•M

SM451398

Please consult your electrician for hanging fixture and wiring.

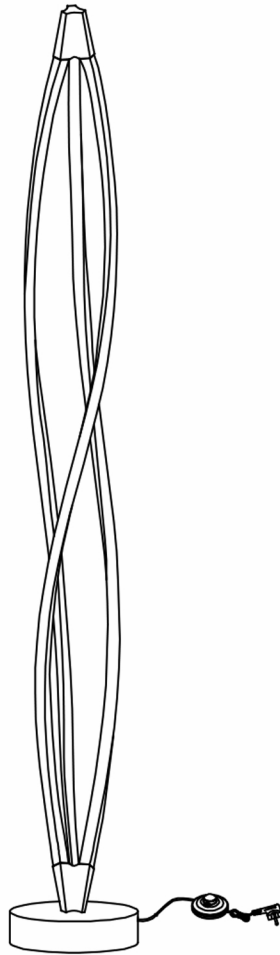

WARNING: WIRES NEED TO BE CONNECTED TO DRIVER FOUND IN CANOPY AND SHOULD NOT CONNECT DIRECTLY TO POWER SOURCE OR A SHORT MIGHT OCCUR.

the fixture is designed to dim with a standard Triac forward phase dimmer. Dimming levels will vary by dimmer.

Below is a list of recommended dimmers:

Lutron MACL-153M
Lutron DVL-153P
Lutron SCL-153P
Leviton IPL06-10Z
Leviton 6674-POW

Due to the inrush current wattage should not exceed 150 watts of product for a 600 watt dimmer





44W LED

STUDIO•M


SM451398

Please consult your electrician for hanging fixture and wiring.


IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation

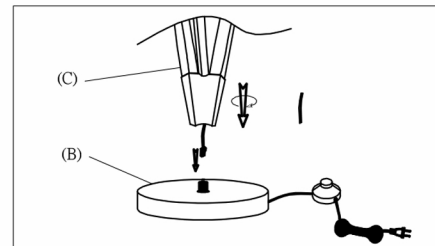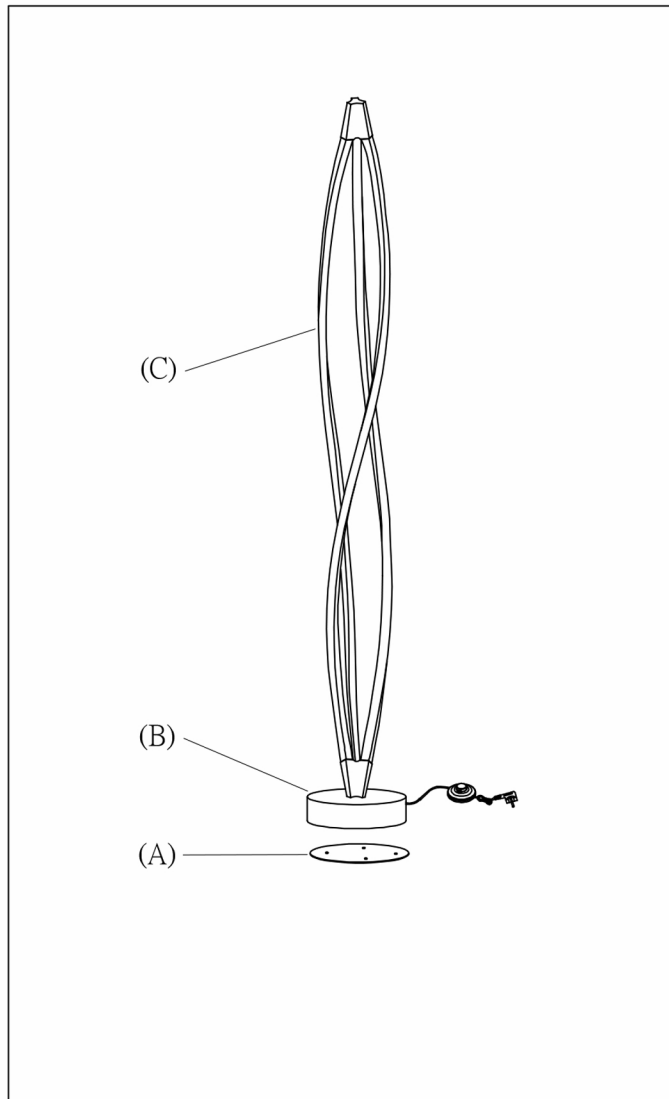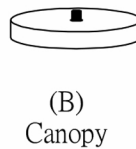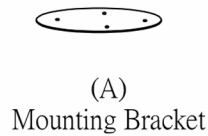

Step.1: Remove Bracket (A) from fixture and install to electrical box.

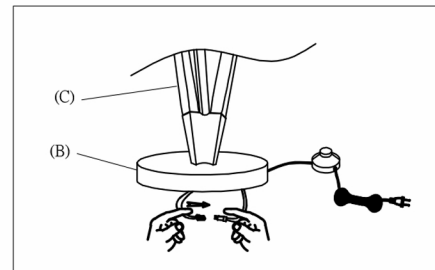

Step.2: Wire fixture to wires in outlet box.
Install Green wire to Ground Screw.

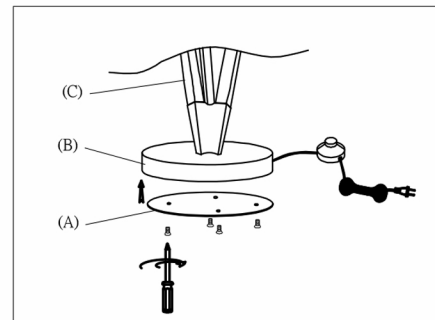

Step 3: Adjust wire length to desired hanging height.
Install Canopy (B) to Bracket (A) and tighten screws at the ends of canopy to secure.

Cleaning & Care:

Clean with soft cloth and a mild detergent.
Do not use abrasive cleaner.